


# How to Upgrade Firmware via LedSet


## 1.Run Linsn's setup software Ledset on computer



## 2.Click Settings – Hardware Setup (upgrade)

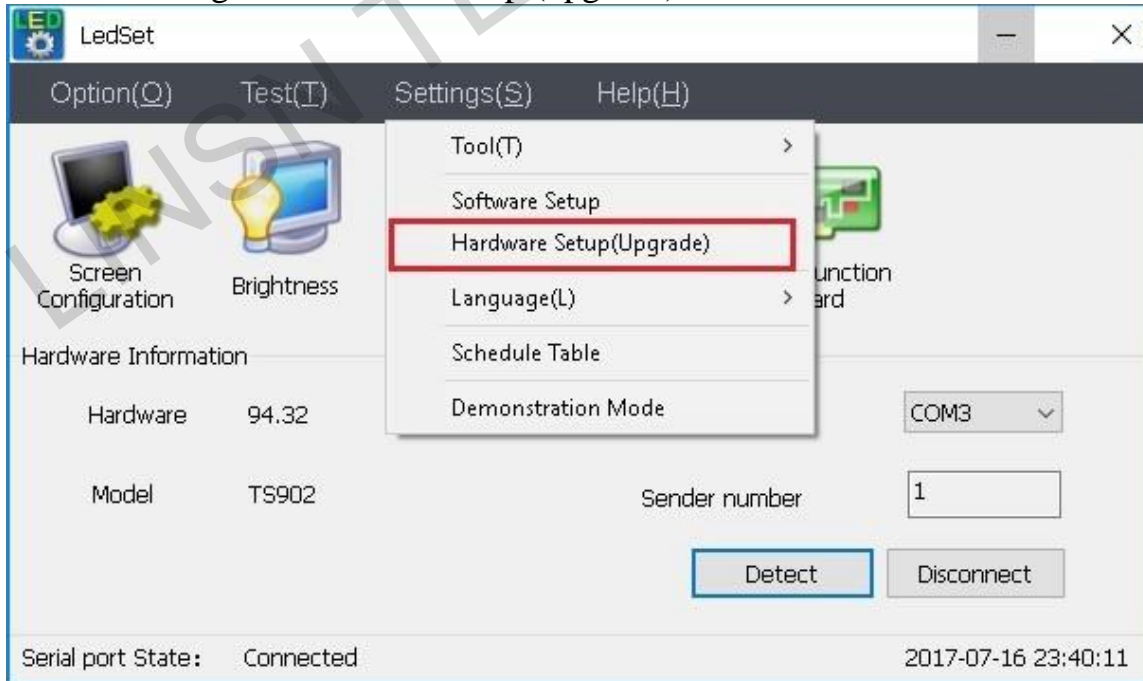

### 3. Type in password: admin

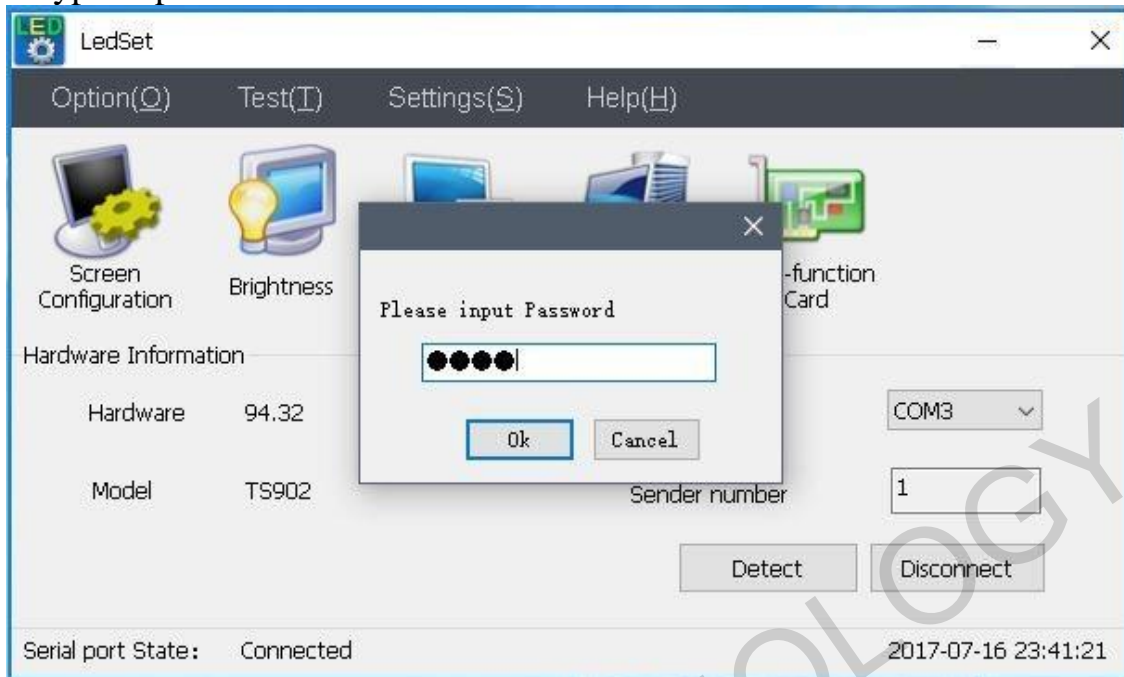

### 4. Click Load to load a firmware (Bin file) on your computer



### 5. Click Upgrade to start upgrading firmware

